

ALL TERRAIN LEGS (DUZI 4): QUICKSTART MANUAL



CONTENTS

1. Anatomy
2. Installation
3. Adjusting Leg Position
4. Quick-Stow Instructions

cinevate.com/duzi

CINEVATE



Locate the 4 socket screws.



Use the included allen key to thread in the socket screws.


Ensure this screw is very tight.
Monitor it over time to ensure it stays threaded.



Hang the circle opening of the leg on the socket screw.



Locate the 4 washers.

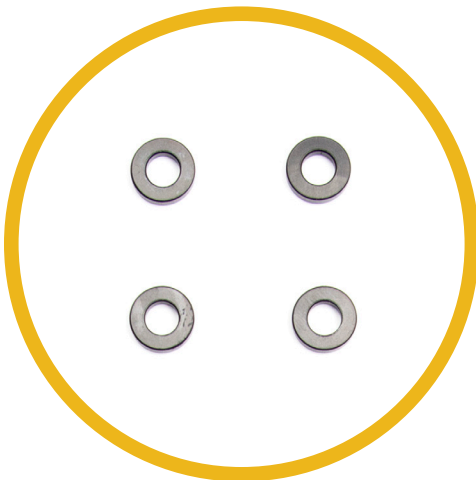

Feed the Kip through the washer and leg. Thread it into the end block.



The legs should look like this when properly attached.



Loosen Kip Handles



Adjust Legs



Tighten Kip Handles



Loosen the Kip Handle 3-4 rotations.
Do not completely remove the Kip Handle



Slide the leg off of the Socket Screw.



Rotate one leg down and one leg up until they sit next to each other.



Hang the hole in the top leg on the Socket Screw.



Tighten Kip Handles.

